



www.sci-supply.com

Sci-Supply® SS77659 Digital Stopwatch with Compass



Programming

Note: A clear plastic covering is placed over the crystal display to avoid scratches during manufacturing packaging and transport. This clear plastic cover can be removed from the front of the display if desired.

Timer Mode

From the default clock display mode, press the center MODE button once to enter timer mode. Press the START/STOP button on the right once to start the stopwatch and again to stop. To reset the stopwatch back to zero, press the SET/LAP/RESET button on the left. Press MODE to exit.



www.sci-supply.com

Double Count Timer Mode

While in timer mode, press the START/STOP button on the right to start the first timer operation. When the desired interval has been reached, press the SET/LAP/RESET button on the left to stop the timer and display the elapsed time. The stopwatch is actually continuing to count in the background while displaying the initial time interval. When the SET/LAP/RESET is pressed again, it will display the timer that has been running in the background as continued from when the SET/LAP/RESET button was first pushed. Press MODE to exit.

Time / Calendar / Alarm Display

Press the center MODE button to enter into normal time mode. Press and hold the START/STOP button to display the Date; Press and hold the SET/LAP/RESET button to display Alarm time.

Setting Time and Day

From normal time mode, press the MODE button three times and the time will display with the seconds and week day flashing. Press the START/STOP button to zero the seconds if desired, then press the SET/LAP/RESET button to select minutes, hours, date or day and use the STOP/START button to adjust those values (press and hold the START/STOP button for faster adjustment). Note that in adjusting the hour you can cycle through 12 hours and select A for AM, P for PM, or H for military (24 hour) time. Press MODE to exit.

Setting the Alarm

From normal time mode, press the MODE button twice and the alarm time will display with the hour flashing. Adjust the alarm hour using the START/STOP button noting that you will need to cycle through for the desired A for AM, P for PM or H for military time (on left) depending upon the time type selected when setting the time and day in the step above. Press MODE to exit.

Alarm On/Off

The alarm is activated when the sound symbol appears on upper right side of display. In order to activate or deactivate the alarm, press the START/STOP and SET/LAP/RESET simultaneously.